NVS-DC800062CM



Delegate Microphone with Voting Function



DESCRIPTION

The NVS-DC800062CM is a Delegate Microphone with Voting Function integrated speaking and voting. It is equipped with electret cardioid directional capacitive pickup with two-color indicator light (red/green), red for speaking, and green for applying for speaking. The mic is powered by the system host or PoE switch, with input voltage of +48V.

FEATURES

- \odot Conference speech mic integrating speaking and voting
- ⊙ 3.5mm stereo headset jack connected to the headphone, with adjustable volume
- Super strong anti-interference ability
- Button check-in function
- \odot Unique ID number for each conference mic
- High-brightness 2.4" LCD screen
- MIC has a self-test function
- ⊙ With internal magnetic high-fidelity speaker

| Specifications | | |
|-----------------|-----------------------------|--|
| Model | NVS-DC800062CM | |
| Microphone Type | Electret cardioid condenser | |
| Sensitivity | -30dBV/pa | |
| Maximum SPL | 125dB (THD<3%) | |
| Input Impedance | 2ΚΩ | |


NVS-DC800062CM



Delegate Microphone with Voting Function

| Equivalent Noise | 20dB (SPL) | |
|---------------------------|---|--|
| Frequency Response | MIC A to MIC B : 50Hz-14kHz | |
| | Host LINE to MIC : 30Hz-18kHz | |
| | MIC to Host LINE : 40Hz-16kHz | |
| Signal to Noise Ratio | >75dB | |
| Total Harmonic Distortion | <0.5% | |
| Crosstalk Attenuation | >80dB | |
| Headset Output | 9dBu, 8-35Ω, 3.5mm | |
| Speaker Power | 1.5W | |
| Power Supply (Battery) | Host +48V power supply or +48V PoE switch | |
| Static Power Consumption | <8W | |
| Maximum Power Consumption | 5W | |
| Weight | 0.75Kg | |
| Dimension | 84x80x145mm | |

FRONT PANEL

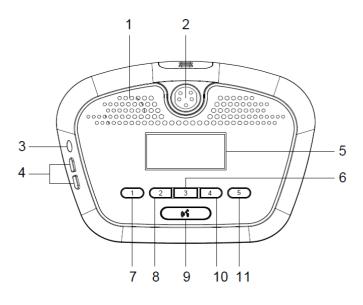

1. MIC built-in server 2. MIC jack

3. Headset jack4. Volume adjustment button

- 5. 2.4" LCD high-brightness LCD screen


- 5. 2.4 LCD high bight less LCD screen
 6. Button "1" Used with the PC software for rating operation
 7. Button "2" Used to select display language and vote
 8. Button "3" Used to check microphone status, vote and select display language
 9. Button "4" Used to select display language, vote and return
- Button "5" Used to end a voting/return.
 MIC button and indicator

NVS-DC800062CM



Delegate Microphone with Voting Function

REAR PANEL

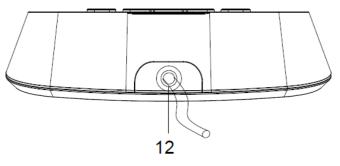

12. Dante Network : RJ45 cable

ORDERING INFORMATION

| Part Number | Description | Standard Quantity |
|----------------|--|-------------------|
| NVS-DC800062CM | Delegate Microphone with Voting Function | 01 |